


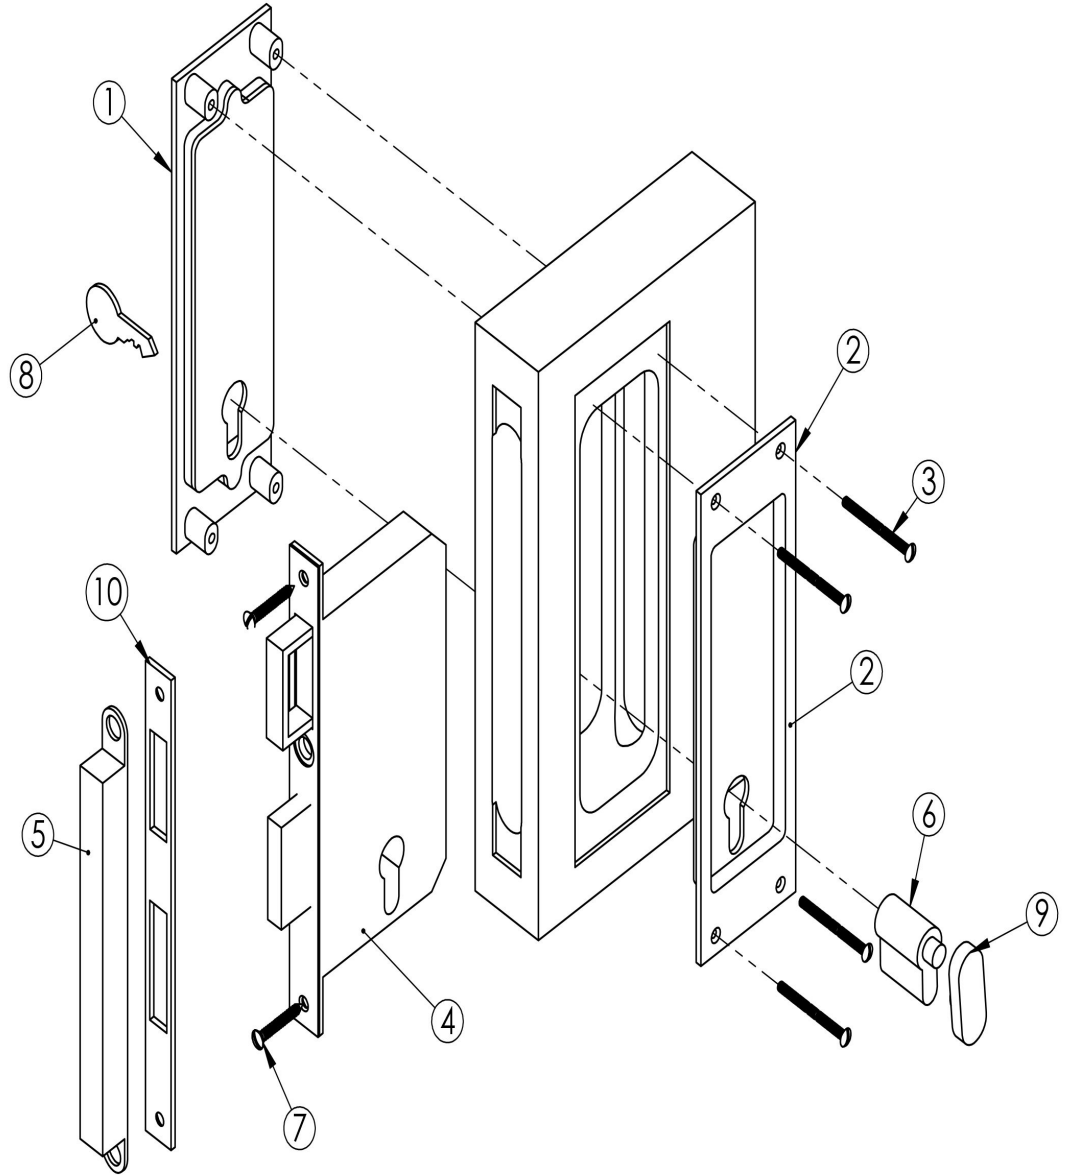

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	PLD210ST-O	OUTSIDE TRIM	1
2	PLD210ST-I	INSIDE TRIM	1
3	PL-OVSCR45	OVAL HEAD M4 BREAKAWAY SCREW	4
4	PLM260	MORTISE LOCK BODY FOR POCKET DOOR	1
5	PLM260DSTB	DUST BOX FOR PLM260	1
6	PLPC	EUROPEAN CYLINDER	1
7	SCR-WS6PL	WOOD SCREW #6 X 1 FOR PL	4
8	KEY	KEY FOR CYLINDER	1
9	PLTK45	TURN KNOB	1
10	PL-STK50-111618	STRIKE PLATE FOR PLM260	1

Linnea®

www.linnea-home.com

PL210 ACTIVE LOCK SET


Toll Free 800-219-2366 Ph 770-559-9035

1 3/4" DOOR THICKNESS

PL210 ACTIVE LOCK SET

ALIGN WITH CENTER
OF DOOR FRAME


ALIGN WITH CENTER
OF DOOR

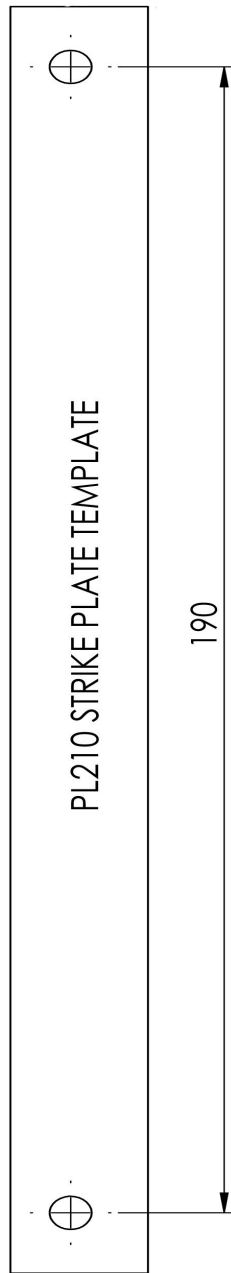

PL210 STRIKE PLATE TEMPLATE

190

CUT HERE

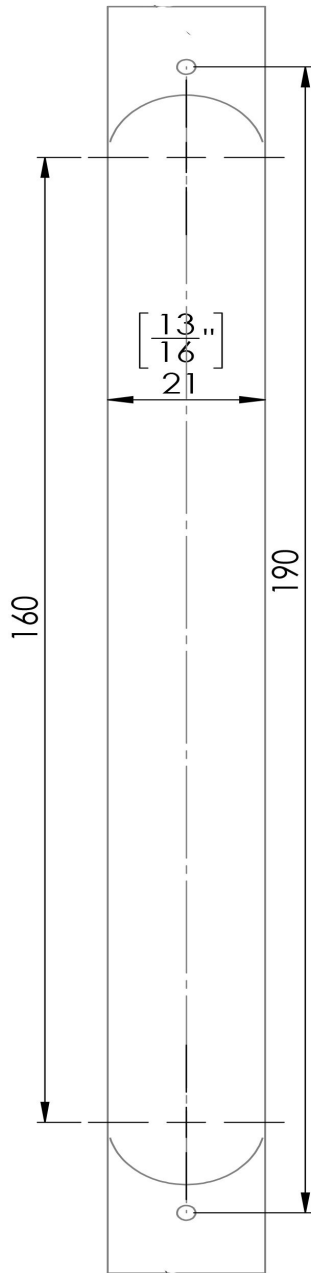

$\left[\frac{13}{16} \right]$
21


160

190

FOLD ALONG DOTTED LINE

$\left[1 \frac{3}{4} \right]$
44

$\left[1 \frac{3}{16} \right]$
30

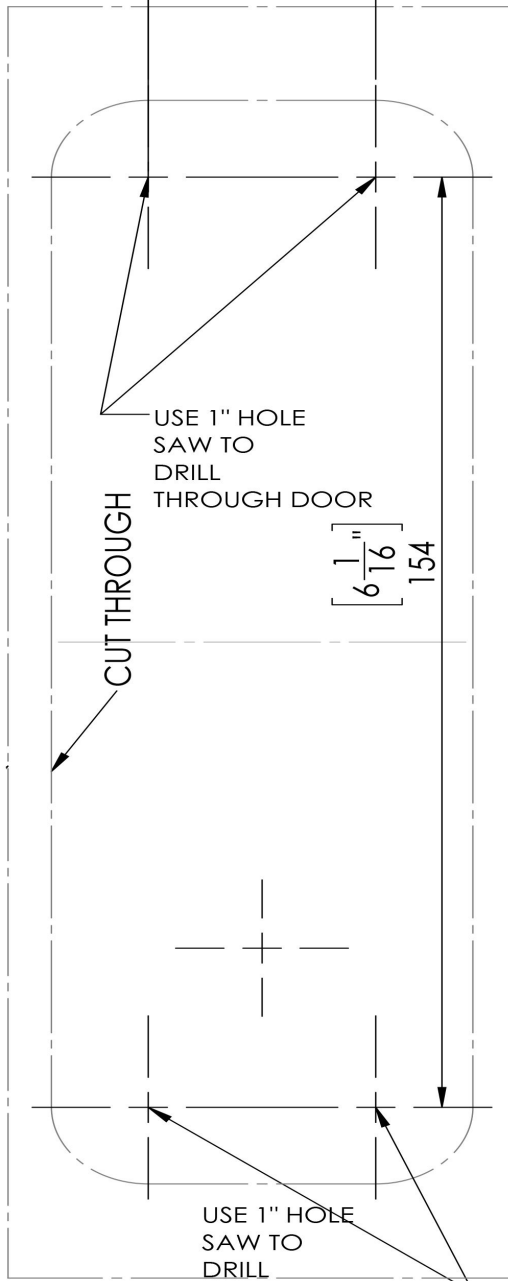

USE 1" HOLE
SAW TO
DRILL
THROUGH DOOR

$\left[6 \frac{1}{16} \right]$
154

CUT THROUGH

USE 1" HOLE
SAW TO
DRILL
THROUGH DOOR

$\left[1 \right]$

25.40

MEASUREMENTS ARE IN
INCHES AND MILLIMETERS

INCHES ARE SHOWN IN []

Linnea
www.linnea-home.com

Toll Free 800-219-2366
Ph 770-559-9035


PRINT THIS PAGE AT 100% SCALE

2" DOOR THICKNESS

PL210 ACTIVE LOCK SET

ALIGN WITH CENTER
OF DOOR FRAME


ALIGN WITH CENTER
OF DOOR

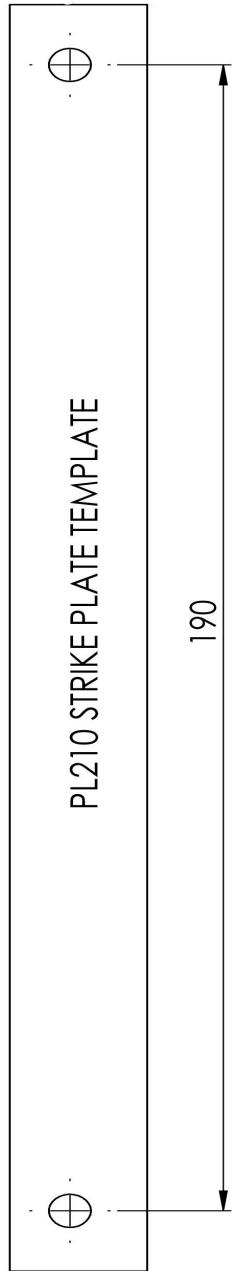

PL210 STRIKE PLATE TEMPLATE

190

CUT HERE

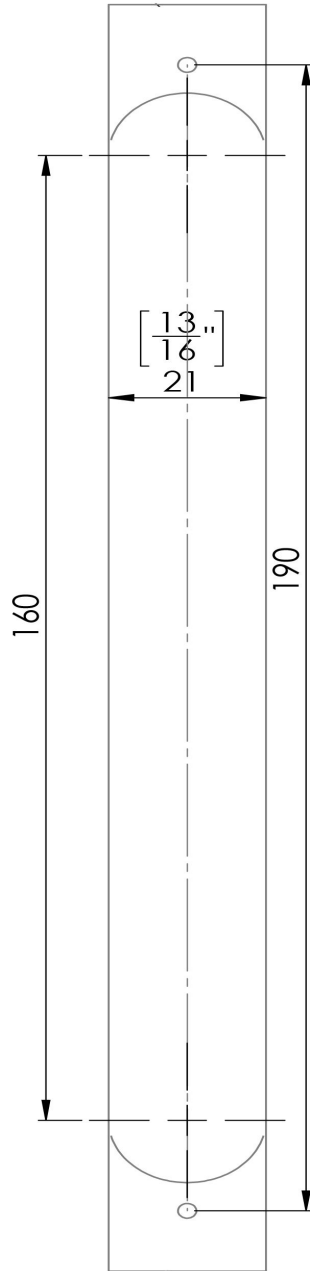

$\left[\frac{13}{16} \right]$
21


160

190

FOLD ALONG DOTTED LINE

$\left[1 \frac{3}{4} \right]$
44

$\left[1 \frac{3}{16} \right]$
30

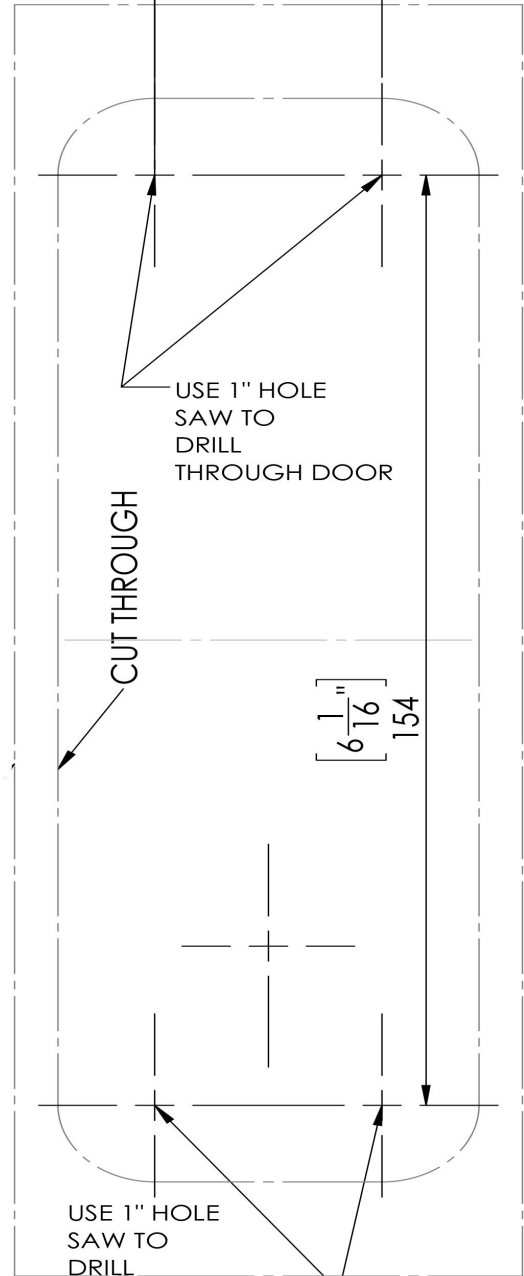

USE 1" HOLE
SAW TO
DRILL
THROUGH DOOR

CUT THROUGH

$\left[6 \frac{1}{16} \right]$
154

USE 1" HOLE
SAW TO
DRILL
THROUGH DOOR

$\left[1 \right]$
25.40

MEASUREMENTS ARE IN
INCHES AND MILLIMETERS

INCHES ARE SHOWN IN []

Linnea
www.linnea-home.com

Toll Free 800-219-2366
Ph 770-559-9035


PRINT THIS PAGE AT 100% SCALE

2 1/2" DOOR THICKNESS


PL210 ACTIVE LOCK SET

ALIGN WITH CENTER
OF DOOR FRAME

ALIGN WITH CENTER
OF DOOR

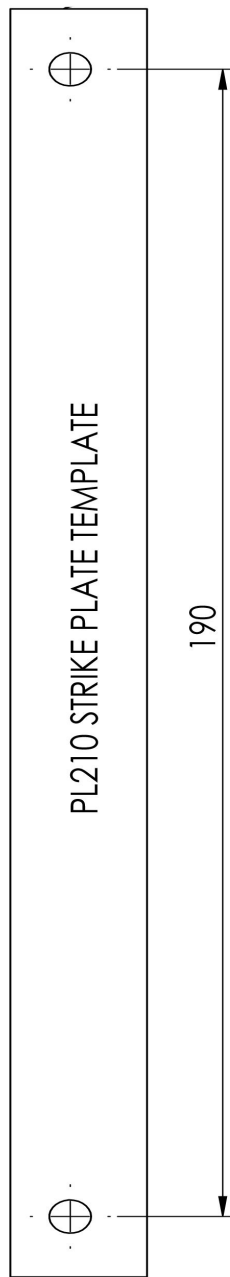


CUT HERE

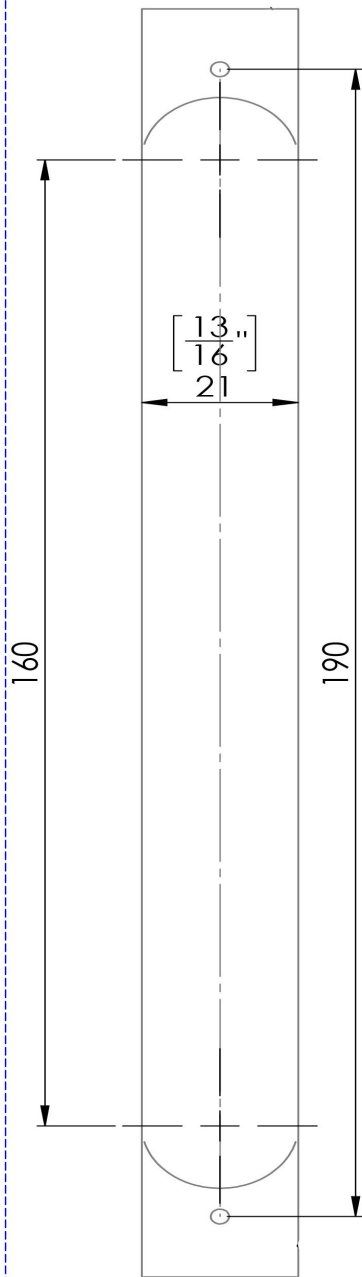

FOLD ALONG DOTTED LINE

$\left[1\frac{3}{4}''\right]$
44

$\left[1\frac{3}{16}''\right]$
30

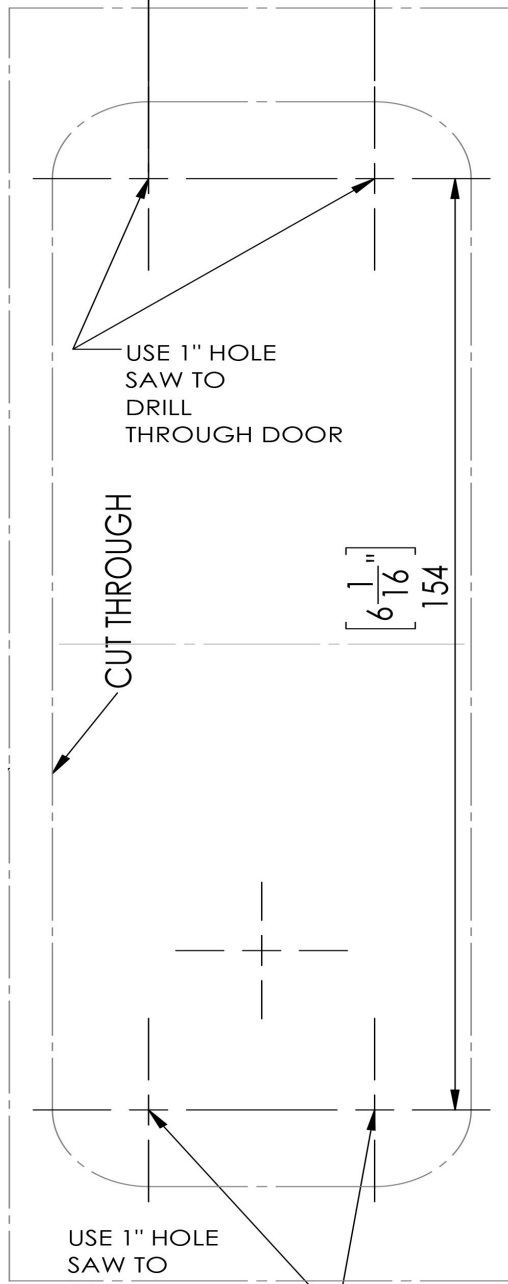

USE 1" HOLE
SAW TO
DRILL
THROUGH DOOR

CUT THROUGH

$\left[6\frac{1}{16}''\right]$
154

USE 1" HOLE
SAW TO
DRILL
THROUGH DOOR

$\left[1''\right]$
25.40

MEASUREMENTS ARE IN
INCHES AND MILLIMETERS

INCHES ARE SHOWN IN []

Linnea
www.linnea-home.com

Toll Free 800-219-2366
Ph 770-559-9035

PRINT THIS PAGE AT 100% SCALE

Print paper template
full scale.
Drill 3.175 mm [1/8"]
on door center
943.4mm [37 9/64"]
above floor

[1 3/4"]
44

Print template full scale
fold and position on door.
Use hole saw to drill
25.40 mm [1"]
through door.
4 places as shown

[6 1/16"]
154

[6 5/16"]
160

CUT
THROUGH DOOR

Use Paper template
drill 21mm x 95mm
deep hole

MORTISE LOCK BODY
95mm DEEP

STEP 1

STEP 2

STEP 3

STEP 4

STEP 5