


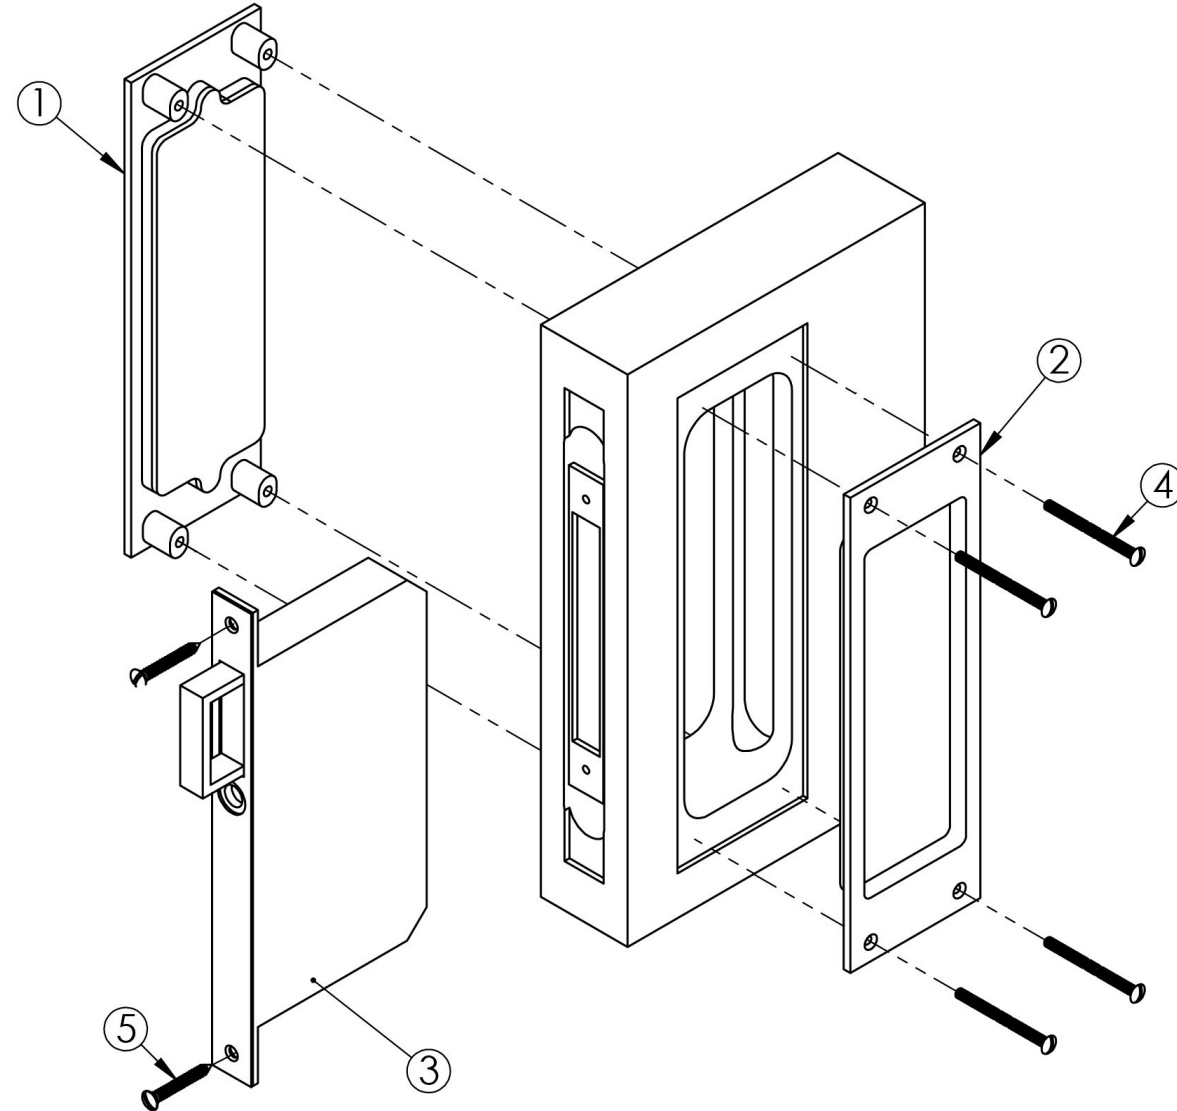


ITEM NO.	PART NUMBER	Description	QTY.
1	PLD210ST-O	OUTSIDE TRIM	1
2	PLD210ST-I	INSIDE TRIM	1
3	PLM260D	DUMMY LOCK FOR PL210 DUMMY	1
4	PL-OVSCR45	OVAL HEAD M4 BREAKAWAY SCREW	4
5	SCR-WS6PL	WOOD SCREW #6 x 1 FOR PL	4

1 3/4" DOOR THICKNESS

PL210 DUMMY LOCK SET

ALIGN WITH CENTER
OF DOOR

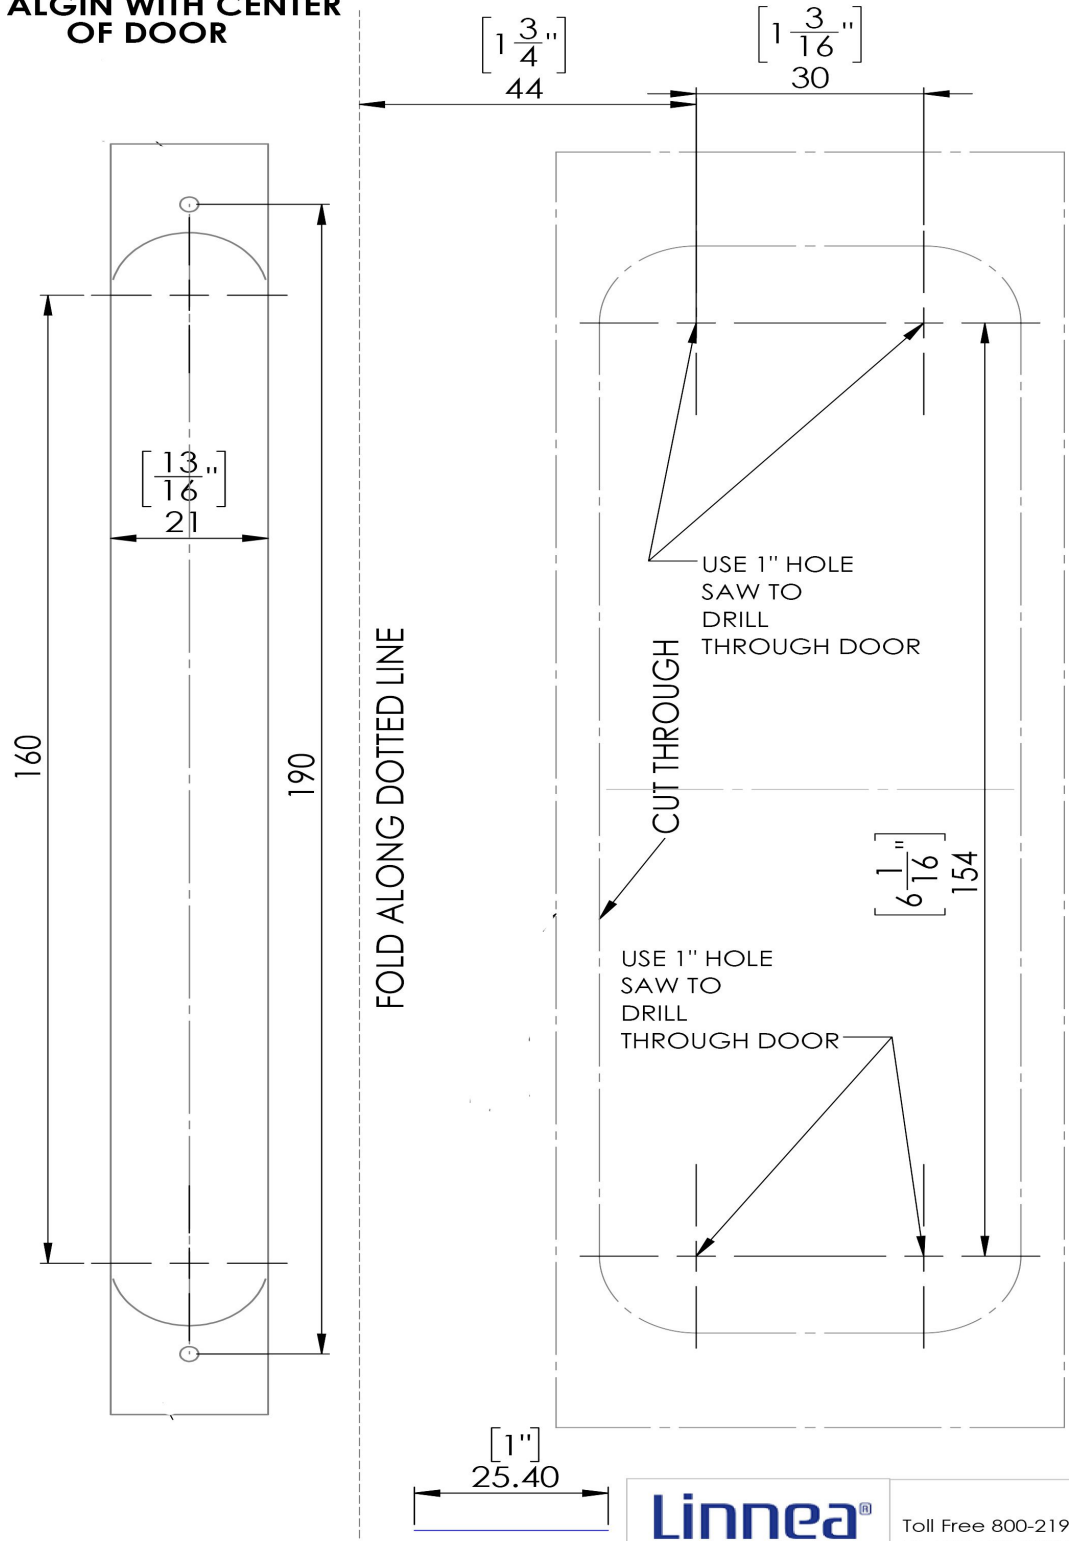

MEASUREMENTS ARE IN
INCHES AND MILLIMETERES

INCHES ARE SHOWN IN []

Linnea[®]
www.linnea-home.com


Toll Free 800-219-2366
Ph 770-559-9035

PRINT THIS PAGE AT 100% SCALE

2" DOOR THICKNESS

PL210 DUMMY LOCK SET


ALIGN WITH CENTER
OF DOOR

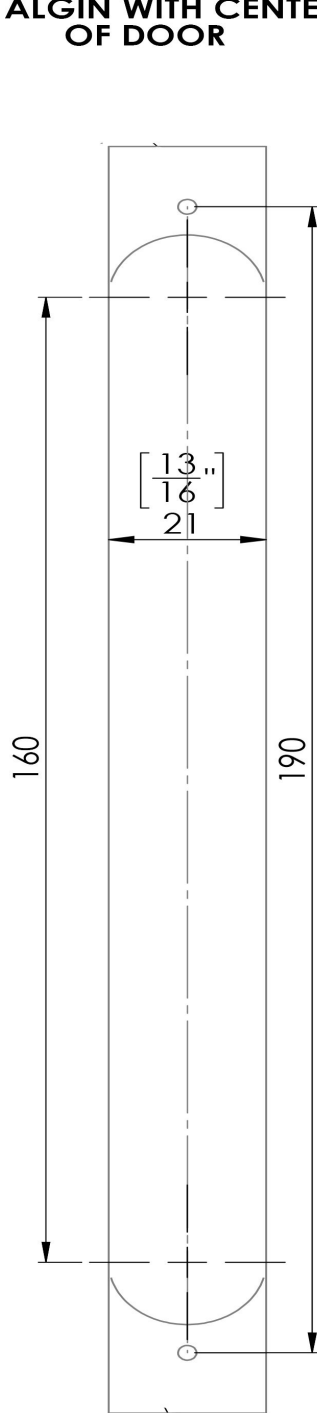

FOLD ALONG DOTTED LINE

$1\frac{3}{4}$
44

$1\frac{3}{16}$
30

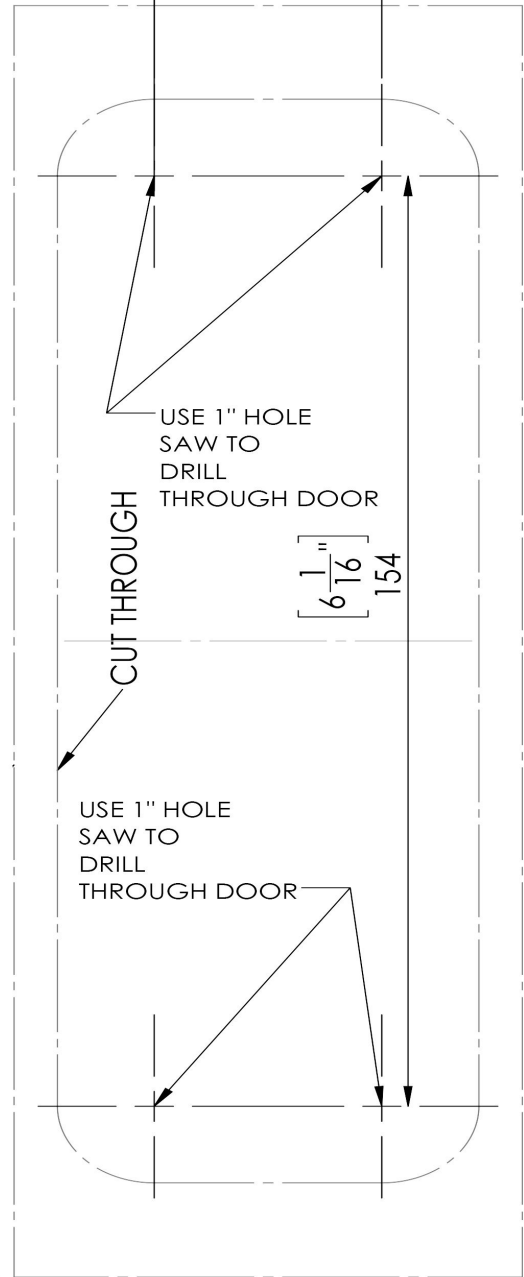

1
25.40

MEASUREMENTS ARE IN
INCHES AND MILLIMETERS


INCHES ARE SHOWN IN []

Linnea[®]
www.linnea-home.com

Toll Free 800-219-2366
Ph 770-559-9035


PRINT THIS PAGE AT 100% SCALE

ALGIN WITH CENTER
OF DOOR

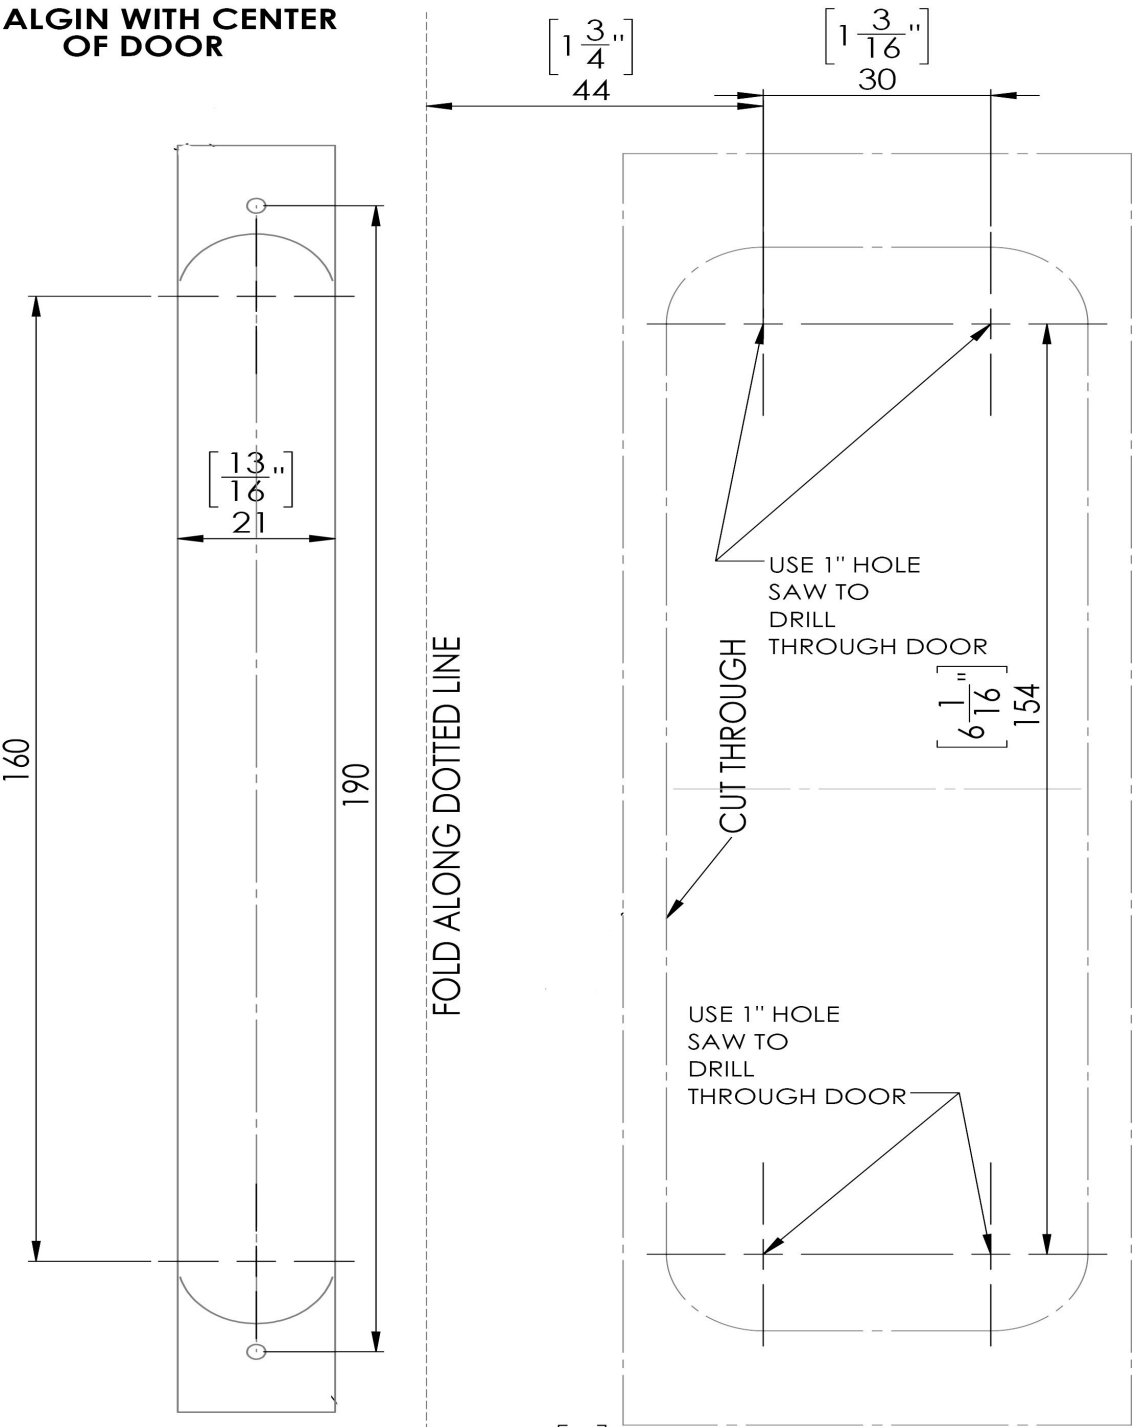

MEASUREMENTS ARE IN
INCHES AND MILLIMETERES

INCHES ARE SHOWN IN []



Print paper template
full scale.
Drill 3.175 mm [1/8"]
on door center
943.4mm [37 9/64"]
above floor

[1 3/4"]
44

Print template full scale
fold and position on door.
Use hole saw to drill
25.40 mm [1"]
through door.
4 places as shown

[6 1/16"]
154

[6 5/16"]
160

CUT
THROUGH DOOR

Use Paper template
drill 21mm x 95mm
deep hole

MORTISE LOCK BODY
95mm DEEP

STEP 1

STEP 2

STEP 3

STEP 4

STEP 5